

# HB07

Hand Blender

User Guide



# TESCO

**SAFETY GUIDE - PLEASE READ CAREFULLY**

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read all the instructions carefully before using your blender and keep them for future reference.
- Unplug the appliance from the mains supply when not in use, when removing or attaching accessories, or before cleaning any part of the appliance.
- This appliance is for occasional household use only.
- Do not use outdoors or in damp conditions.
- Do not immerse the motor unit or the electrical cord or plug in liquids.
- Do not use near a source of heat or on an unstable surface.
- Never let children operate this appliance. Close supervision is necessary when this appliance is used near children.
- Ensure that the power cord does not touch any hot surface and that it does not overhang the edge of your work surface.
- When unplugging the power cord, hold the plug top, not the power cord.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
- Do not use attachments or accessories which are not recommended by the manufacturer. They may cause malfunction or injury.
- Do not attempt to replace the power cord on this appliance. This should only be carried out by authorised service personnel with specialist tools.
- Store the appliance away from direct sunlight and out of the reach of children.
- There are no user serviceable parts in your appliance  
Unauthorised dismantling or servicing will void the product warranty.
- Do not use the appliance for any purpose not

expressly specified in this manual.

**When operating your blender:**


- When the blender is not in use make sure that it is safely unplugged from the mains supply.
- To reduce the risk of injury, never place the cutting blade on base without first putting the bowl properly in place.
- When using the blender ensure there is adequate room in the vessel to avoid splashing the contents.
- After each operation, allow the blender to cool for 3 minutes before using it again.
- The blade on this blender is sharp. Treat it with care at all times and never allow fingers, hair, or clothing to come into contact with the blade.
- If you wish to scrape the contents of a bowl with a spatula, remove the blender first.
- Do not process food containing hard objects which cannot be safely broken up by the blade.
- Do not use the blender with hot liquids.
- If the blade gets clogged, switch off, unplug from the mains and allow the unit to stop before clearing the obstruction.
- Make sure the bowl is on a sturdy work surface. If the bowl is not heavy enough, hold it or support it properly.
- Do not yank or pull the cord as this may damage it and eventually cause a risk of electric shock.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- Keep the blender out of the reach of children.

**NOTE:** Never process very hot liquids. This is dangerous.  
**DANGER OF SCALDING!**

**PRELIMINARIES****Unpacking**

Unpack your blender carefully. If the item is incomplete or damaged return the item to your nearest Tesco store for replacement. Please have your receipt with you when you call.

Retain the packaging. If you dispose of the packaging do so with regard to any recycling regulations in your area.

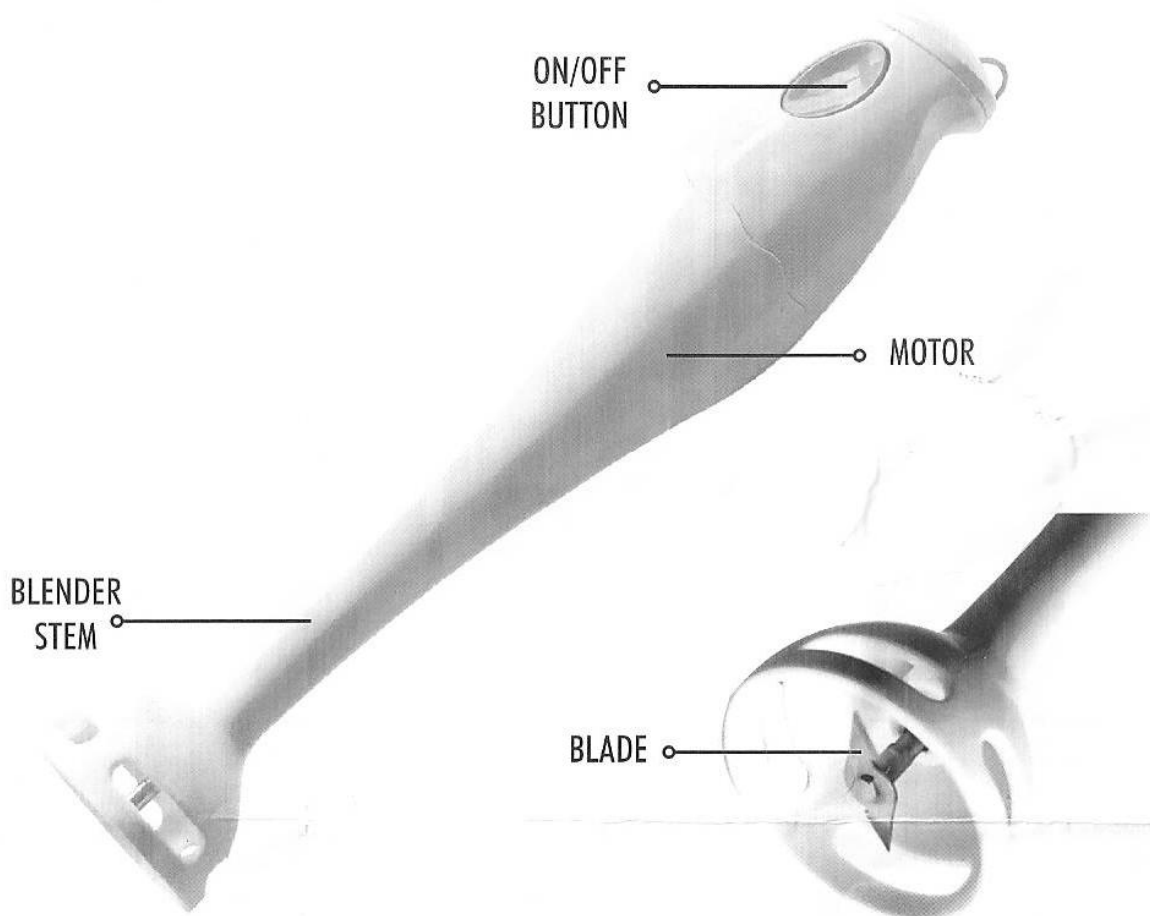**ABOUT YOUR BLENDER****USING THE BLENDER****Before using your blender for the first time:**

- Check that the voltage marked on the rating plate matches your mains voltage:
- Please read all the instructions in this User Guide with particular reference to the safety notes.
- **Clean the blender.** Refer to the cleaning notes on Page 4 for instructions.

**Important Note:**

- The maximum time you can run the unit with no load is 15 seconds.
- The maximum time you can run the unit is 1 minute. After each minute of continuous use, switch off and let the motor rest for three minutes before continuing.

- Blades are very sharp, handle them with care.
- **Switch off and unplug the appliance after use or when adding or removing ingredients.**
- **Using the hand blender**

The blender is ideal for making purees, cold sauces, mayonnaise, or even for mixing drinks.

Introduce the blender into the food before switching it on to avoid splashing.

Press and hold down the button to switch the blender on. Release the button to switch the unit off.


**NEVER** use the blender in a vessel while it is being heated on the stove.

**NEVER** let the base of the blade housing come into prolonged contact with the body of a vessel while blending.

## CLEANING AND STORAGE

### Unplug the appliance after use.

- The blade housing may be cleaned either by holding it under running water or with a brush dipped in a solution of washing up liquid and warm water to remove particles of food and grease from the blade.
- Do not immerse the blender more than 60mm in water and make sure the motor is well away from splashing water. Refer to the drawing.

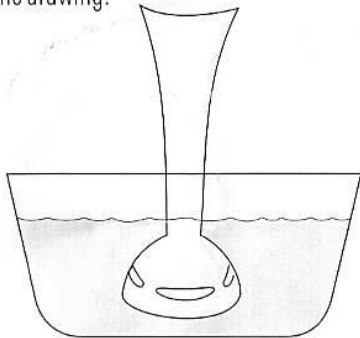

- The motor should be cleaned by wiping it with a damp cloth. Do not hold the motor under running water, or immerse it in water.
- Dry the unit carefully after cleaning.
- Do not use pointed or sharp objects to remove food particles from under the blade.
- **Caution:** Blades are very sharp, handle with care.

### Storage

- Store the blender in a dry cupboard or safe storage area out of the reach of children.
- Do NOT use the ring at the top of the wire entry clamp on the blender to hang up the appliance.

## ELECTRICAL INFORMATION

The appliance lead is terminated with a UK approved mains plug fitted with a 3A fuse. If the fuse needs to be replaced, an ASTA or BSI approved BS1362 fuse rated at 3A must be used.

 
If you need to change the mains plug, remove the fuse and dispose of this plug safely immediately after cutting it from the cord.

### Connecting a Mains Plug

The wires in this mains lead are coloured in accordance with the following code: Blue: NEUTRAL Brown: LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED. Do not make any connection to the terminal marked with the letter E or coloured GREEN or GREEN & YELLOW or marked with the Earth Symbol.

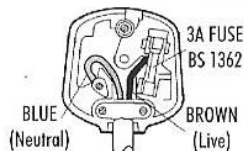

## WARRANTY

Your TESCO appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights.

### SPECIFICATIONS

Voltage Rating:	220-240V, 50Hz
Power Consumption (max):	150W
Duty Cycle (Kb):	1 min.
Net Weight:	0.56 Kg



Class II construction double insulated. This product must not be connected to earth.



Produced after 13th August 2005.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.